


USER MANUAL

*Please read this manual before installing your product
and keep for future reference.*

**Product name – Mono Universal Frame for Muro
500/600/800**

Product code – MUROMONOFRAME

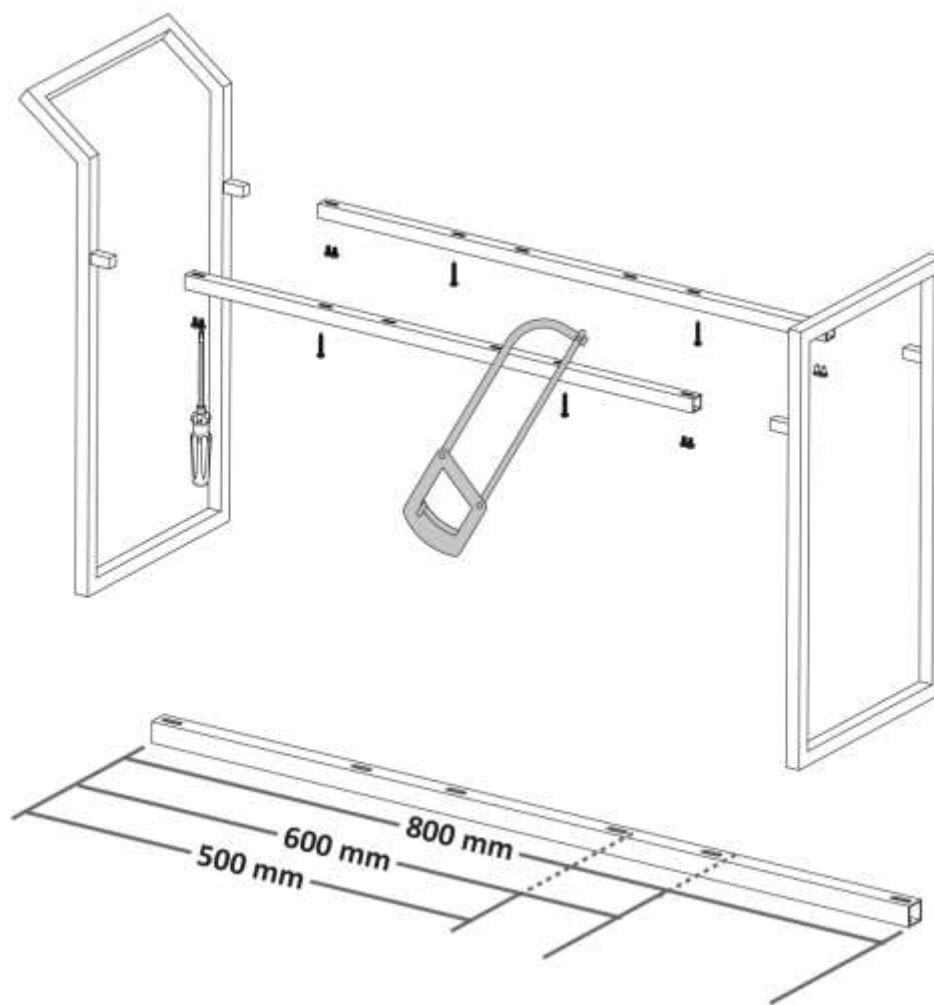

- **Single-person assembly**
- **We always recommend using professional tradespeople to install your product**

V1_02.03.2021

Tools required

- Hack Saw
- Screwdriver
- Tape measure


Installation

Please spend five minutes reading this section before commencing with the installation of your new furniture


1. Should any of your item have a defect, please do not install as returns will not be accepted once fitted.
2. We advise you use a qualified person to install your units, as any issue
3. This product is water resistant but NOT waterproof.
4. Please avoid direct sunlight as this will cause the painted surfaces to discolor.
5. When fixing to a stud or paneled wall, appropriate frame-work should be installed to support the unit.
6. Where units have been cut, al raw edges MUST be sealed against water ingress.

Instructions

1. Cut the support bars to size using a hack saw.

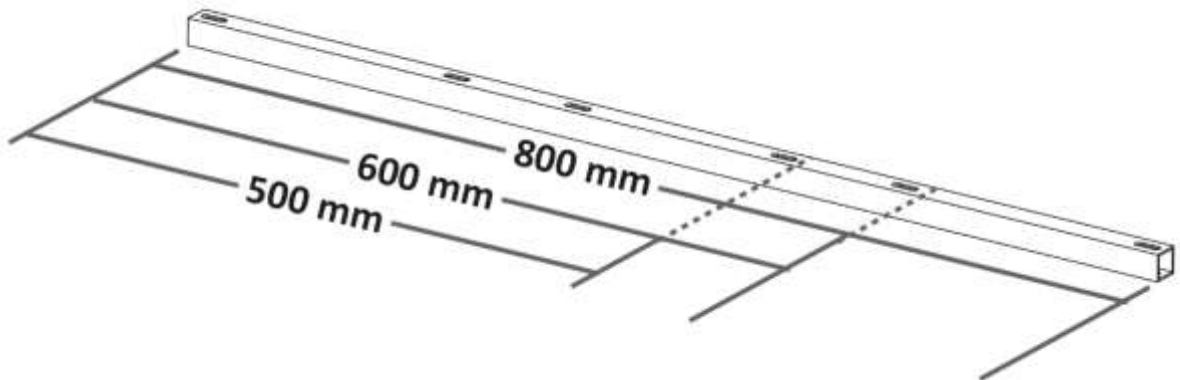

2. Attach the support bars to the frame and screw into place.

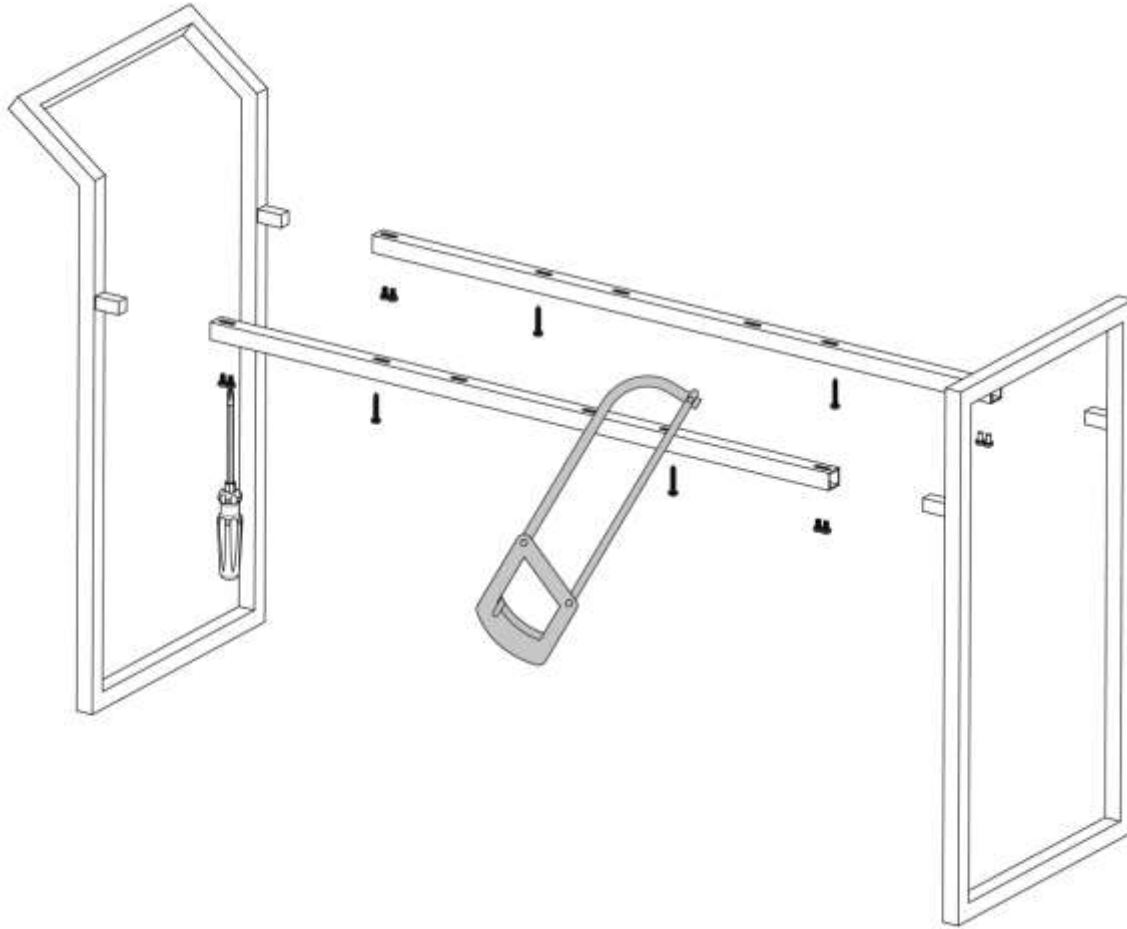

Cleaning

To maintain the surface of your product, wipe with a clean damp cloth and wipe dry, do not use any abrasive cleaning agents or materials. If any harsh chemicals come into contact with the surface of the product, rinse and wipe clean immediately.